

# VidyoRoom™ HD2

## Getting Started Guide



### What's Included

Your HD2 codec is shipped with the following items:



VidyoRoom HD2	
<ul style="list-style-type: none"><li>■ Power cables for the United States, Europe, and Ireland/United Kingdom – total length 6 ft (1.828 m)</li><li>■ HDMI to HDMI Cable – 6 ft (1.828 m)</li></ul>	<ul style="list-style-type: none"><li>■ Mini DisplayPort to HDMI adapter.</li><li>■ Ethernet cable, Cat5E – 7 ft (2.13 m)</li><li>■ Serial to USB adapter – 1 ft (.30 m)</li><li>■ Infrared remote control with 2 AAA batteries</li><li>■ External infrared receiver with USB cable – 6 ft (1.828 m)</li></ul>

Please refer to the diagram on the next page to better understand how to connect peripherals to the VidyoRoom HD2.

To view a list of peripherals compatible with VidyoRoom, go to <http://www.vidyo.com/support/peripherals>.

Please refer to the *VidyoRoom Administrator Guide* to complete the setup of your VidyoRoom HD2.

# Installing Your HD2 – Diagram

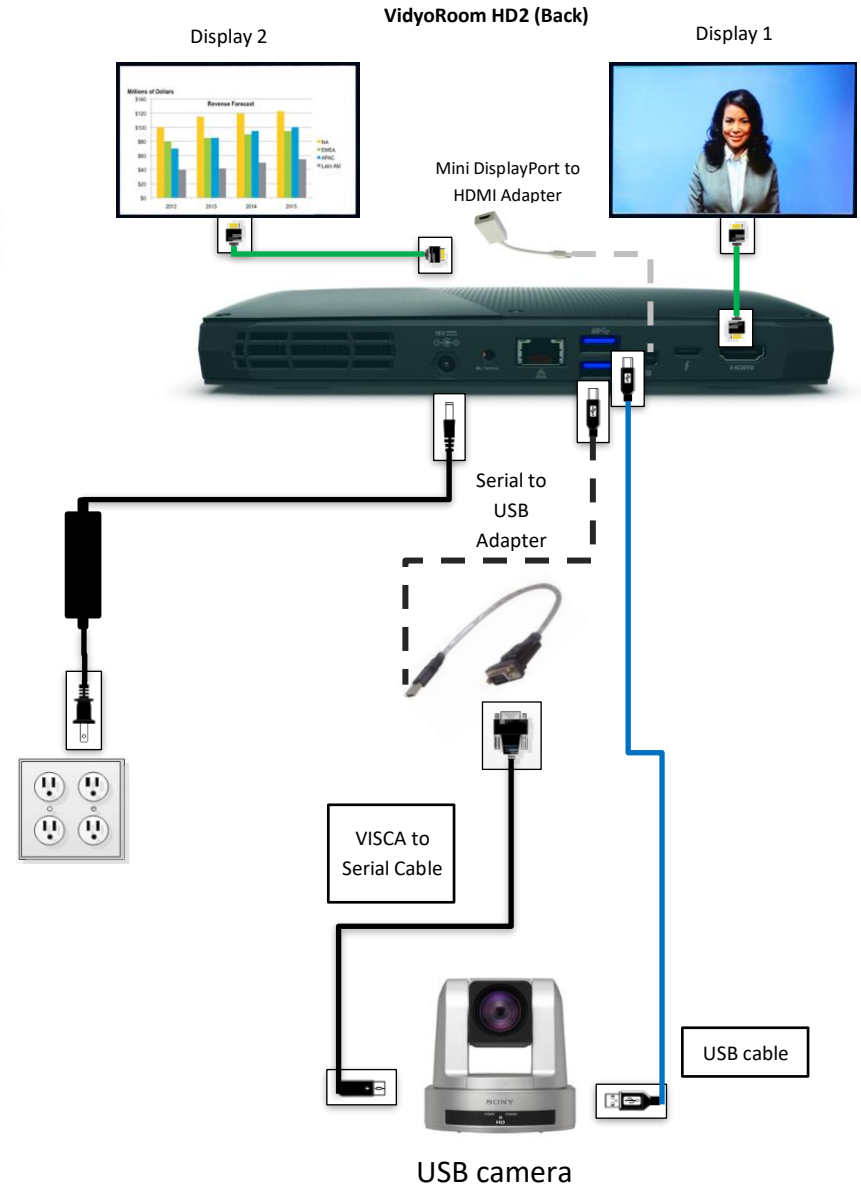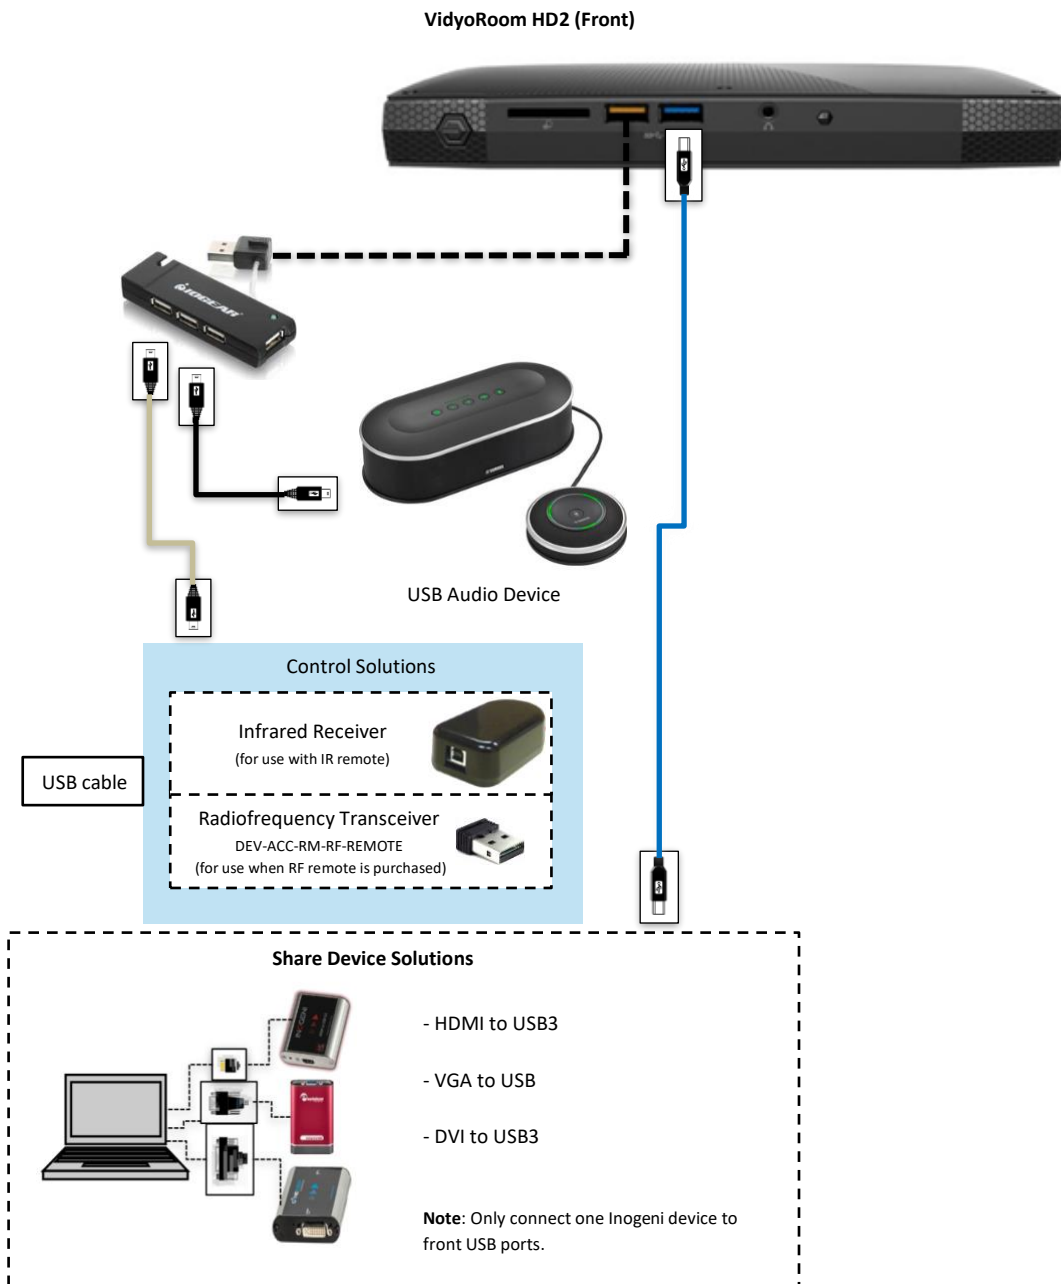


**IMPORTANT!**

**Note:** When available, set to #7 and use the VISCA cable to allow VidyoRoom controls to move your camera. **Make sure it is connected to the bottom USB port.**

# Configuring Supported Television Picture Settings

If the edges of the VidyoRoom UI are cut off, like in the screenshot below, please see the table at the bottom of this page to reconfigure the alignment.

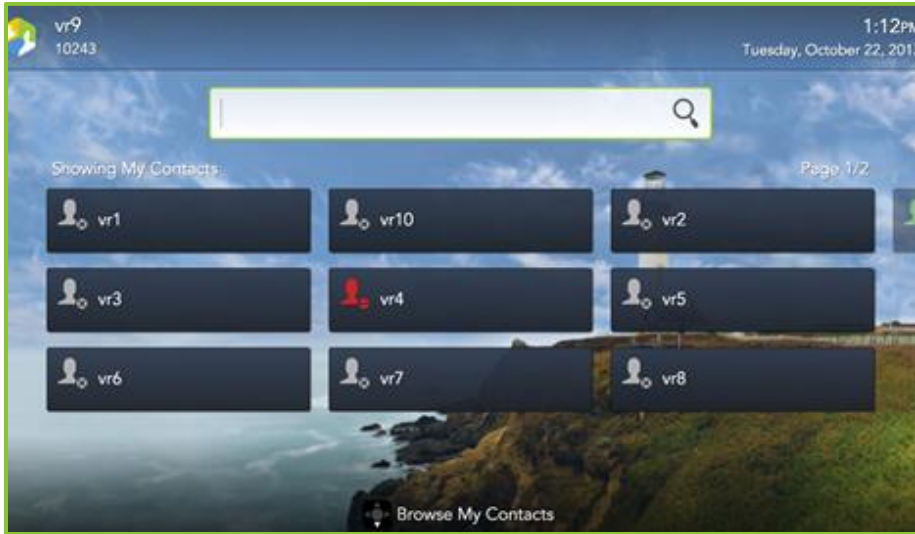

The following table describes how to configure supported television picture settings in order to properly align the user interface.

LG	Samsung	Sharp	Sony	Vizio
<ol style="list-style-type: none"> <li>1. Press <b>Menu</b> on your TV remote.</li> <li>2. Select <i>Picture &gt; Picture Options</i>.</li> <li>3. Select <b>Just Scan</b>.</li> </ol>	<ol style="list-style-type: none"> <li>1. Press <b>P. Size</b> on your TV remote.</li> <li>2. Select <b>Screen Fit</b>.</li> </ol>	<ol style="list-style-type: none"> <li>1. Press <b>Menu</b> on your TV remote.</li> <li>2. Select <i>Picture &gt; Advanced Settings</i>.</li> <li>3. Turn Overscan <b>Off</b>.</li> </ol>	<ol style="list-style-type: none"> <li>1. Press <b>Wide</b> on your TV remote.</li> <li>2. Select <i>Wide Mode &gt; Full</i>.</li> </ol>	<ol style="list-style-type: none"> <li>1. Press <b>Display</b> on your TV remote.</li> <li>2. Select <b>Normal</b>.</li> </ol>

For more information, refer to the documentation provided with your television.